

# **ZANUSSI**

## **ELECTRIC OVENS**

INSTRUCTION BOOKLET

## Important Safety Information

These warnings are provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance.

### Installation

- It is mandatory that all operations required for the installation are carried out by a qualified or competent person, in accordance with existing rules and regulations.
- It is **dangerous** to alter the specification in any way.
- Once you removed all packaging from the appliance, ensure that it is not damaged and the electric cable is in perfect conditions. Otherwise, contact your dealer before proceeding with the installation.

### Child Safety

- This appliance has been designed to be operated by adults and children under supervision. Young children **MUST NOT** be allowed to tamper with the controls or play near or with the oven.
- Accessible parts of this appliance may become hot when it is in use. Children should be **KEPT AWAY** until it has cooled.

### During use

- This appliance has been designed for cooking edible foodstuff only and **MUST NOT** be used for any other purposes.
- Ensure that all control knobs are in the OFF position when not in use.
- Should you connect any electrical tool to a plug near this cooking appliance, ensure that electric cables are not in contact with it and keep them far enough from the heated parts of this appliance.
- If the appliance is out of order, disconnect it from the electric supply.
- Do not leave utensils containing foodstuffs, e. g. fat or oil in or on the appliance. This could cause damage in case the appliance is inadvertently switched on.
- Always place the dripping pan in position to collect fat when using the grill or when cooking meat. Pour a little water into the dripping pan to avoid smoke and unpleasant smells.
- Always use oven gloves to remove pans from the oven.
- For hygiene and safety reasons, this appliance should be kept clean at all times. A build-up of fats or other foodstuff could result in a fire.
- Disconnect the appliance from the electrical supply, before carrying out any cleaning or maintenance work.
- Some parts of the appliance are covered by a shock-proof plastic film. Remove this film before using the oven.
- This appliance is meant to operate with a single-phased connection to 230V electrical supply. An

eventual 400V poliphasic connection without earth wire will destroy the oven and the hob, if fitted.

- **The manufacturer disclaims any responsibility should all the safety measures not be carried out.**

### Service

- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by unexperienced persons may cause injury or serious malfunctioning. Refer to your local Service Centre. Always insist on genuine spare parts.

### Environmental Information

- After installation, please dispose of the packaging with due regard to safety and the environment.
- When disposing of an old appliance, make it unusable, by cutting off the cable.

**It is most important that this instruction book is be retained with the appliance for future reference. Should the appliance be sold or transferred, always ensure that the book is left with the appliance in order that the new owner can get to know the functions of the appliance and the relevant warnings.**

### Guide to Use the instructions

The following symbols will be found in the text to guide you throughout the Instructions:



Safety Instructions



Step by step instructions for an operation



Hints and Tips



Environmental information

**MANUFACTURER:** ELECTROLUX ZANUSSI S.p.A.  
Viale Bologna, 298  
47100 FORLÌ (Italy)

# Contents

## For the User

Important Safety Information	3
Description of the Oven	4
When the oven is first installed	6
Using the Oven	6
Cooking Tables	8
Cleaning and maintenance	10
Technical Assistance	12
Something not working...	12









## For the Installer

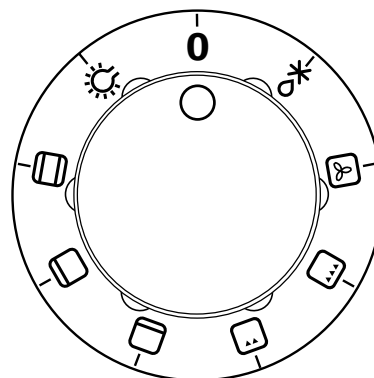 
Technical Data	13
Installation	13
Electrical connection	14

# Description of the Oven

## Oven function control knob

The oven function control knob can have the following symbols and functions:

-  Oven Light - The oven light will be on without any cooking function
-  Conventional cooking - The heat comes from both the top and bottom element, ensuring even heating inside the oven.
-  Top heating element - The heat comes from the top of the oven only.
-  Bottom heating element - The heat comes from the bottom of the oven only.
-  Inner grill element only - can be used for grilling small quantities.
-  Double Grill - The full grill element will be on.
-  Fan cooking - This allows you to roast or roast and bake simultaneously using any shelf, without flavour transference.
-  Defrost Setting - This setting is intended to assist in thawing of frozen food.



## Thermostat control knob

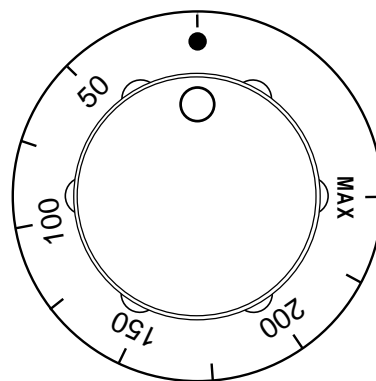 
Turn the thermostat control knob to select temperatures between 50°C and 250°C / MAX.

## Thermostat control light (°C)

Once the oven temperature has been selected, the temperature light will come on and remain on until the oven has reached the correct setting; after that, it will go on and off with the thermostat, showing how the temperature is being maintained.


## Oven control light

It will come on every time an heating element is set on operation.




## End of cooking programmer

This device allows you to make the oven switch off automatically once the preset time is over. An acoustic signal will be heard when the cooking is completed. The cooking duration can be set up to 90 minutes maximum. Place food in the oven and turn the oven function control knob and the thermostat control knob on the required settings. Turn the timer knob to maximum time position, then turn it back to set the required cooking time. When the cooking time is over, an acoustic alarm will sound and the oven will switch off automatically.

Turn the timer knob on  to set the oven on manual operation.

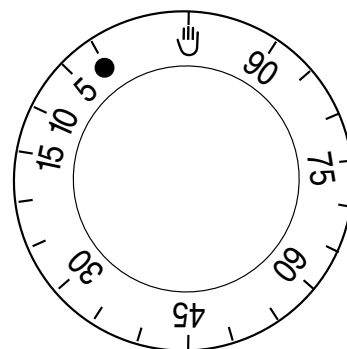 Turn the the oven function and thermostat control knobs to zero.



## The Safety Thermostat

This oven is provided with a safety thermostat. In case of malfunctioning of the main thermostat, and consequent over-heating, the safety device will stop the power supply to the appliance. If this happens, call your local Zanussi Service Centre. Under no circumstances should you attempt to repair the appliance yourself.

## The Cooling Fan for the Controls

This oven is provided with a cooling fan, meant to keep the front panel, the knobs and the oven door handle cool. This fan may run on after the oven or grill is switched off, until a normal temperature is reached.

# When the oven is first installed

**i** Before cooking for the first time, carefully wash the **oven accessories**.

☞ Once the oven has been installed:

- set the thermostat knob to MAX (250);
- switch the oven function control knob to conventional cooking (☐);
- allow the oven to run empty for approximately 45 minutes;
- open a window for ventilation.

During this time, an unpleasant odour may be emitted. This is absolutely **normal**, and is caused by residues of manufacturing.

Repeat this operation for the grill and fan cooking function. Once this operation is carried out, let the oven cool down, then clean the oven cavity with a soft cloth soaked in warm soapy water.

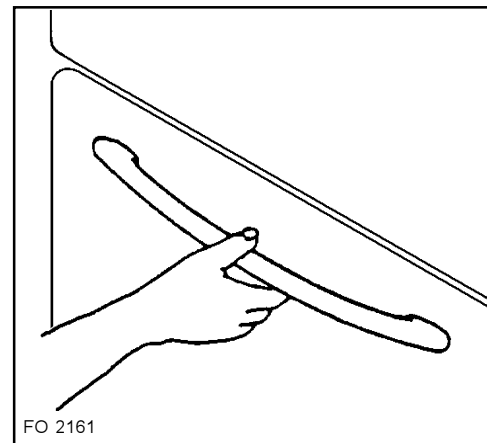 


Fig. 4

To open the oven door, always catch the handle in its central part (Fig. 4).

## Using the Oven

**Always cook with the oven door closed.**

- Stand clear when opening the drop down oven door. **Do not** allow it to fall open - support the door using the door handle, until it is fully open.
- The oven has four shelf levels. The shelf positions are counted from the bottom of the oven as shown in the diagram.
- Do not place cookware directly on the oven base.

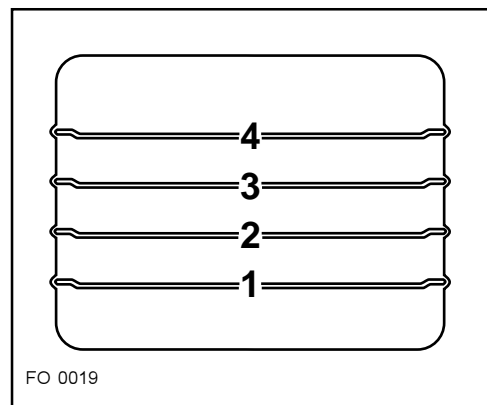 


Fig. 5

## Condensation and steam

When food is heated it produces steam in the same way as a boiling kettle. The oven vents allow some of this steam to escape. However, **always stand back from the oven when opening the oven door** to allow any build up of steam or heat to release.


If the steam comes into contact with a cool surface on the outside of the oven, e.g. a trim, it will condense and produce water droplets. This is quite normal and is not a fault with the oven. To prevent discoloration, regularly wipe away condensation and also soilage from surfaces.


# Using the oven




 
Always cook with the oven door closed

## Conventional cooking

Turn the oven function control knob to the relevant symbol () and set the thermostat knob on the required temperature.

If you need more heat from the bottom of the oven, turn the oven function control knob to  (bottom heating element only).

## Fan cooking

Turn the oven function control knob to the relevant symbol ( - ) and set the thermostat knob on the required temperature. The fan behind the back panel circulates heated air into the oven.

 
If you need to cook more than one dish in the fan oven at the same time, place the shelves on the first and third position from the bottom (fig. 7). If you are cooking only one dish in the fan oven, use the lower positions, as this will give you better results.

## Grilling

Turn the oven function control knob to the relevant symbol and set the thermostat knob on the required temperature. With the setting on the "double grill" function, you will obtain even heating on the whole surface of the dish. When grilling meat or fish, spread a little oil on them and always place them on the oven grid. The shelf level depends on the thickness of the food.

Always place the dripping pan at the lowest level, with some water in it, to avoid smoke and unpleasant smells.

## Defrosting

Turn the oven function control knob to the relevant symbol () and set the thermostat knob on the OFF position (symbol : ●). The oven fan operates without heat and circulates the air, at room temperature, inside the oven.

- The temperatures inside the oven can reach 250°C. Always ensure that you are using oven proof baking trays, oven dishes, etc.
- Do not place pans, biscuit pans or aluminium foil directly on the base of the oven. This could cause a heat build-up which could affect the performance of the oven and damage the oven enamel.
- Carefully supervise cookings with **fats or oil**, since these types of foodstuff can result in a fire, if overheated. For the same reason, be careful when placing or removing food in the oven, not to let any fat or oil fall on the oven base. If this happens, carefully clean the oven to avoid unpleasant smells or smoke.

## Hints and Tips on Cooking Fish and Meat

You can place meat in oven proof dishes, or directly on the oven shelf. In this case, remember to place the dripping pan in the first position from the bottom with some water in it. The dripping pan will avoid the falling of melted fat on the oven base.

White meat, poultry and fish in general, need a medium temperature cooking (between 150 and 175 °C). If you need to cook red meat (slightly browned on the outside and more gently cooked in the inside), a higher temperature (between 200 and 250 °C) for a short time is recommended.

## Hints and Tips on baking

Cakes usually need a medium temperature cooking, between 150 and 200 °C.

A short oven pre-heating (about 10 minutes) is recommended when cooking cakes or baking. Once the cooking has been started, keep the oven door closed during all the cooking time, and check the cooking results through the oven door glass.

## Hints and Tips on grilling

If you need to grill meat or fish, place them directly on the shelf after spreading a little oil on them. In the grill function, heat comes only from the top element. Therefore, you need to adjust the cooking level depending on meat or fish's thickness. Always remember to place the dripping pan in the lower position with some water in it.

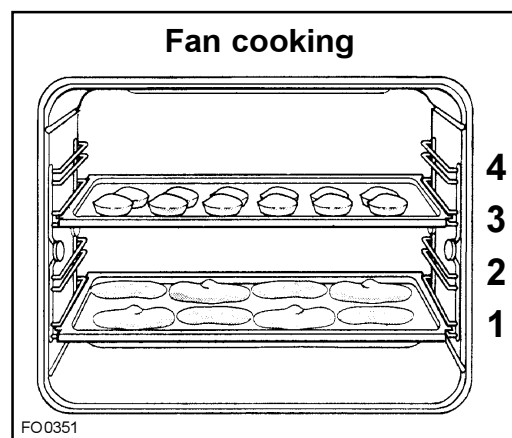 




 
 
 
 
 
 




Fig. 7

FO0351

# Cooking Tables

## Conventional and fan cooking

WEIGHT (GR.)	TYPE OF DISH	Conventional Cooking 		Fan Oven  - 		Cooking time  minutes	NOTES
		Level    	temp. °C	Level    	temp. °C		
	<b>Cakes</b>						
	Whipped up kneading	2	180	2 (1 and 3)*	160	45 ~ 60	
	Leavened kneading	2	180	2 (1 and 3)*	160	20 ~ 35	
	Shortbread dough	2	180	2 (1 and 3)*	160	20 ~ 30	
	Butter-milk cheese cake	1	175	2	150	60 ~ 80	
	Apple cake	1	180	2 (1 and 3)*	160	40 ~ 60	
	Strudel	2	175	2 (1 and 3)*	150	60 ~ 80	
	Jam-tart	2	180	2 (1 and 3)*	160	45 ~ 60	
	Small cakes	2	180	2 (1 and 3)*	160	15 ~ 25	
	Biscuits	2	180	2 (1 and 3)*	160	10 ~ 20	
	Meringues	2	100	2 (1 and 3)*	100	90 ~ 120	
	<b>Bread and Pizza</b>						
1000	White bread	1	200	2	175	45 ~ 60	1 piece
500	Rye bread	2	200	2	175	30 ~ 45	In bread pan
500	Bread rolls	2	200	2 (1 and 3)*	175	20 ~ 35	8 rolls
250	Pizza	1	220	2 (1 and 3)*	200	20 ~ 35	In baking pan
	<b>Flans</b>						
	Pasta flan	2	200	2 (1 and 3)*	175	40 ~ 50	
	Vegetable flan	2	200	2 (1 and 3)*	175	45 ~ 60	
	Quiches	2	200	2 (1 and 3)*	175	35 ~ 45	
	Lasagne	2	200	2	175	45 ~ 60	
	<b>Meat</b>						
1000	Beef	2	200	2	175	50 ~ 70	On grid
1200	Pork	2	200	2	175	100 ~ 130	On grid
1000	Veal	2	200	2	175	90 ~ 120	On grid
1500	English roast beef	2	220	2	200	50 ~ 70	On grid
1200	Lamb	2	200	2	175	110 ~ 130	Leg
1000	Chicken	2	200	2	175	60 ~ 80	Whole
4000	Turkey	2	200	2	175	210 ~ 240	Whole
1500	Duck	2	175	2	160	120 ~ 150	Whole
3000	Goose	2	175	2	160	150 ~ 200	Whole
1200	Hare	2	200	2	175	60 ~ 80	Cut in pieces
	<b>Fish</b>						
1000	Whole	2	200	2 (1 and 3)*	175	40 ~ 60	2 fishes
800	Fillets	2	200	2 (1 and 3)*	175	30 ~ 40	4 fillets

 
**NOTE:** Cooking times do not include pre-heating time. We recommend a short oven pre-heating (about 10 minutes) before baking or cooking pizza.

(\*) If you need to cook more than one dish at the same time, we recommend you to place them on the levels quoted between brackets.

The times given in the table are intended as a guide only. Only experience will enable you to determine the correct setting to suit your personal requirements.

# Cooking Tables

## Grilling


TYPE OF DISH	Quantity		Grilling		Cooking time (minutes) 🕒	
	PIECES	WEIGHT	Level 	temp. °C	Upper side	Lower side
Steaks	4	800	4	max	10	8
Chops	4	600	4	max	12	8
Sausages	8	500	4	max	10	6
Chicken (cut in pieces)	6	800	3	max	30	20
Kebabs	4	700	4	max	12	10
Chicken (breast)	4	400	4	max	13	10
Tomatoes	8	500	4	max	12	—
Fish (fillets)	4	400	4	max	8	6
Sandwiches	4	—	4	max	8	—
Toast	4	—	4	max	2~3	1

## Grease Filter

When cooking meat, the grease filter must be fitted over the oven fan by clipping it over the vents in the back panel. This will prevent a built-up of fat on the fan impellor. Do not use abrasive materials to clean the seal. The grease filter is dishwasher proof.

When cooking is completed and the oven has cooled down, remove the filter by pushing the protruding tongue on the filter upward. (See Fig. 8) Wash the filter after use using warm soapy water.

**Fit the grease filter only when roasting.**

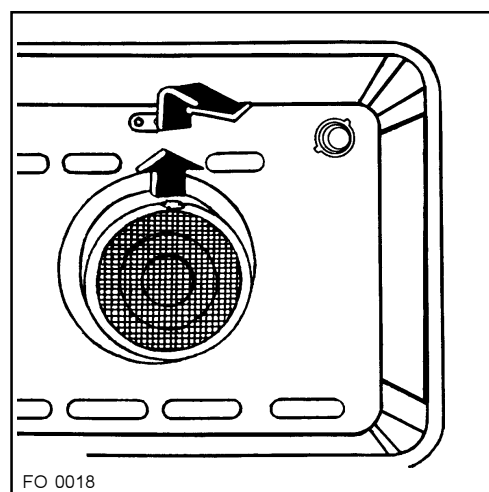 

**Fig. 8** FO 0018



# Cleaning and maintenance

## General Cleaning



Before carrying out any cleaning or maintenance work, always disconnect the appliance from the electrical supply, and allow it to cool down.

- When using **spray** cleaning products, be careful not to spread them on the heating elements or on the thermostat sensor.
- Never use harsh **abrasives**, steel wool or cleaners with **bleach**, as they could damage the enamel and the oven door glass.

## The Oven Cavity

The enamelled oven cavity is best cleaned whilst the oven is still warm. It is advisable to wipe the oven over with a soft cloth soaked in warm soapy water after each use. However, from time to time, it will be necessary to do a more complete cleaning, using a proper oven cleaner. In case of particularly tough stains, you can use stainless steel cleaning products or some warm vinegar.



**If cooking fruits**, some over-heated natural acids can squeeze and settle on the oven enamel, causing stains quite difficult to remove. This could affect the enamel brightness, but it will have no consequence on the oven performances. To avoid these stains to be burnt out during the next cooking, carefully clean the oven cavity after all fruits cookings.

## The Oven Door and its gasket

Before cleaning the oven door, we recommend you to remove it from the oven.



Proceed as follows:

- a) open the oven door completely;
- b) find the hinges linking the door to the oven (fig. 9);
- c) unlock and turn the small levers located on the two hinges (fig. 9);
- d) handle the door by its left- and right-hand sides, then slowly turn it towards the oven until it is half-closed;
- e) gently pull the oven door off its site (fig. 9);
- f) place it on a steady plan.

Clean the oven door glass with warm water and a soft cloth only.

Once the cleaning is carried out, refit the oven door, following the procedure in reverse.

The correct operation of the oven is ensured by a gasket placed round the edge of the oven cavity.

- Periodically **check** the condition of this gasket. If necessary, clean it without using abrasive cleaning products.
- If the gasket shows to be **damaged**, call your local Service Centre. Do not use the oven until it has been repaired.

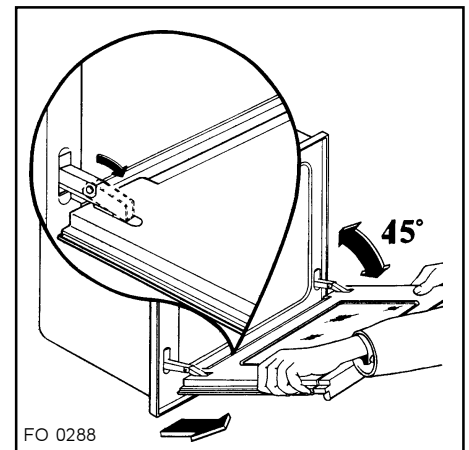 


Fig. 9

FO 0288

## Replacing the Oven Light


**Ensure the electricity supply is switched off before carrying out this operation.**

The oven bulb has to comply to these features:

- a) resistant to temperatures of 300 °C;**
- b) electric rate: 230 V - 50 Hz;**
- c) electric power rate: 15 W;**
- d) connection type: E 14.**

To replace the bulb, proceed as follows (Fig. 10):

- a) push in and turn the glass lid anticlockwise;**
- b) remove the faulty bulb;**
- c) replace it with a new one;**
- d) refit the glass lid;**
- e) switch on the electricity supply.**

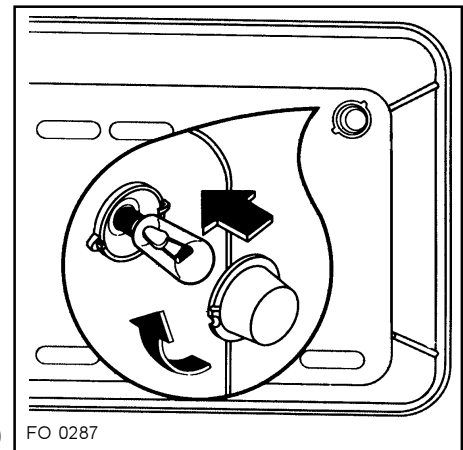 

**Fig. 10**

FO 0287

## Oven Shelves and Shelf Supports

To clean the oven shelves, soak in warm soapy water and remove stubborn marks with a well wetted soap impregnated pad. Rinse well and dry with a soft cloth.

# Something not working...

If the appliance is not working correctly, please carry out the following checks, before contacting your local Service Centre.

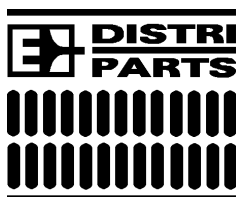 
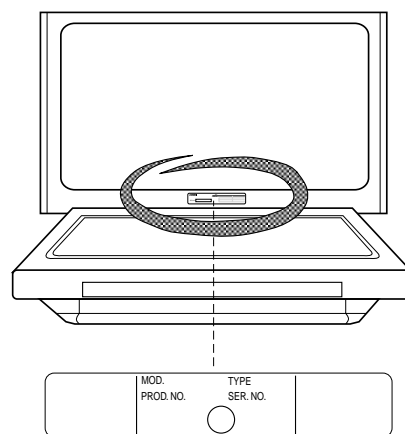 
SYMPTOM	SOLUTION
■ The oven does not come on	◆ Check that both a cooking function and a temperature have been selected <i>or</i> ◆ Check the appliance is wired in properly, and the socket switch or the switch from the mains supply to the oven are ON.
■ The oven temperature light does not come on	◆ Turn the thermostat knob on a temperature <i>or</i> ◆ Turn the oven function control knob on a function.
■ The oven light does not come on	◆ Turn the oven function control knob on a function <i>or</i> ◆ Buy a new oven light bulb, asking for it to your local Service Centre and replace it by following the instruction provided in this booklet.
■ It takes too much time to finish the dishes, or they are cooked too fast.	◆ Refer to the contents of this booklet, especially to the chapter "Using the oven".
■ Steam and condensation settle on the food and the oven cavity.	◆ Leave dishes inside the oven no longer than 15-20 minutes after the cooking is completed.

## Technical Assistance

If after the checks listed in the previous chapter, the appliance still does not work correctly, contact your local Service Centre, specifying the type of malfunctioning, the appliance model (Mod.), the product number (Prod. No.) and the serial number (Ser. No.) marked on the identification plate.

This plate is placed on the front external edge of the oven cavity.

Original spareparts, certified by the product manufacturer and carrying this symbol are only available at our Service Centre and authorized spareparts shops.



# Technical Data

## Recess dimensions

Height	in-column	58,0 cm
	undertop	59,1 cm
Width		56,0 cm
Depth		55,0 cm

## Oven cavity dimensions

Height	32,5 cm
Width	42,0 cm
Depth	39,0 cm
Volume	53 l

# Installation

The following instructions are meant to a qualified technician, in order to allow him carry out the installation in compliance with the rules in force. The building-in and the electrical connection fo the appliance must be carried out by a qualified and authorized technician only.

## Building In

It is important that the dimensions and materials of the surround or cabinet into which the oven will be built are correct and will withstand a temperature increase.

A correct installation will have to ensure a proper protection against contact with electric parts or merely functionally isolated parts.

All the units meant to ensure protection have to be fitted not to be taken away without using any tool.

We recommed not to install the appliance near refrigerators or freezer, since the heat could affect the performance of these appliances.

## Oven dimensions

The oven dimensions are shown in fig. 13.

## In-Column recess dimensions

The recess must have the dimensions shown in Fig. 14.

## Undertop recess dimensions

The recess must have the dimensions shown in Fig. 15.

## Heating elements ratings

Bottom heating element	1000 W
Top heating element	800 W
Full Oven (Top+Bottom) (1000 + 800)	1800 W
Simple Grill heating element	1750 W
Double Grill heating element	2550 W
Oven rear heating element	2000 W
Convection fan	30 W
Cooling fan	25 W
Oven lamp	15 W
Voltage tension (50 Hz)	230 V
Maximum power rating (230V - 50Hz)	2600 W

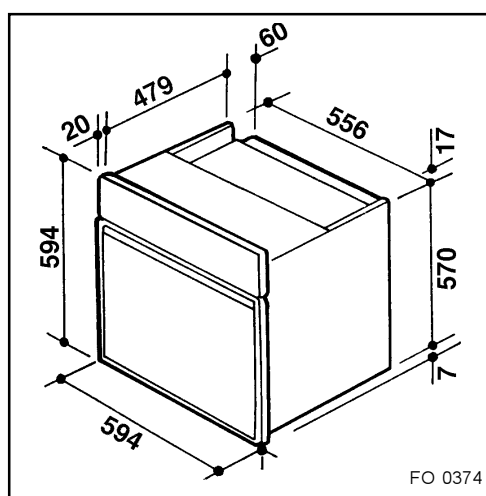 


Fig. 13

FO 0374

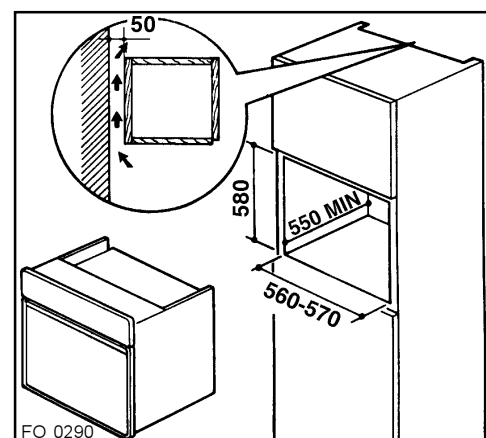 


Fig. 14

FO 0290

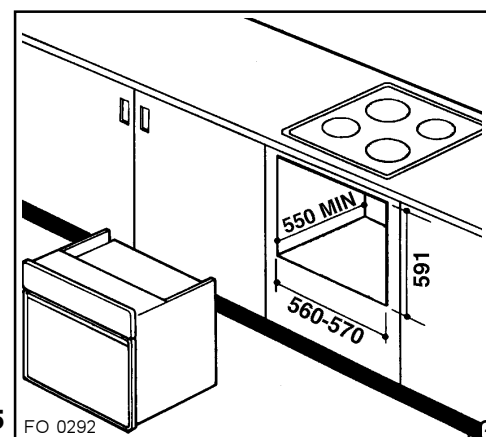 


Fig. 15

FO 0292

## Securing the oven to the cabinet

- Fit the appliance into the cabinet recess.
- Open the oven door and secure the oven to the kitchen cabinet with four wood screws, which fit the holes provided in the oven frame (Fig. 16).

When installing an electric plate hob over the oven, the hob's electrical connection and the oven's one have to be carried out separately, for security reasons and to let the oven be taken off the unit easier, if necessary.

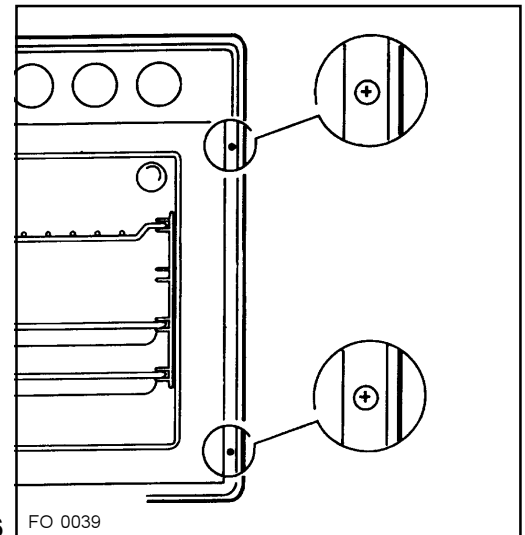 


Fig. 16 FO 0039

## Electrical connection

Before the appliance is connected:

- 1) check that the main fuse and the domestic installation can support the load;
- 2) check that the power supply is properly earthed in compliance with the current rules;
- 3) check the socket or the double pole switch used for the electrical connection can be easily reached with the appliance built in the furniture unit.

If connecting the appliance directly to the electric system, a double pole switch must be installed between the appliance and the electricity supply, with a minimum gap of 3 mm. between the switch contacts and of a type suitable for the required load in compliance with the current rules. The earth wire must not be interrupted by the double switch pole.

The connection cable has to be placed in order that, in each part, it cannot reach a temperature 50 °C higher than the room temperature.

After the connection is carried out, test the heating elements for about 3 minutes.

### Terminal block

The oven has an easily accessible terminal block, which is meant to work with an electric single-phase rate of 230 V (Fig. 17).

**The manufacturer disclaims any responsibility should all the safety measures not be carried out.**

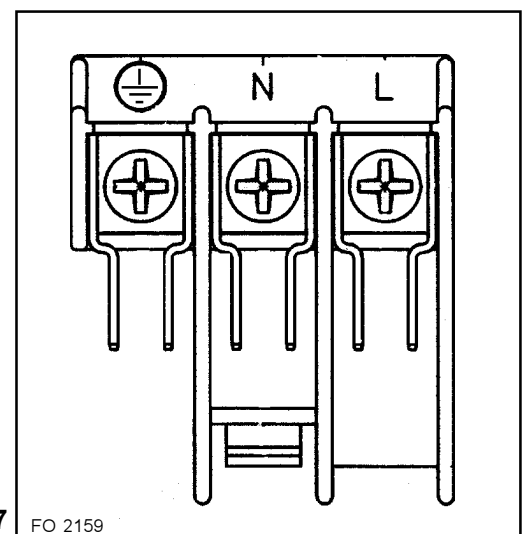 


Fig. 17 FO 2159